

Handrad Estlcam V1 für den Atmega

Pin 1 - Joystick Z

Pin2 – Programm Start/Stop (Estlcam V12,V11 nur Start)

Pin3 – B-Encoder

Pin4 – OK-Taste

Pin5 – A-Encoder

Pin6 – Spindel on/off (Estlcam V12, V11 nur ON)

Pin7 - +5V

Pin8 – GND

Pin9 – Frei

Pin10 – Programm Stop (V11)

Pin11 – Spindel OFF (V11)

Pin12 – Joystick X

Pin13 – Poti Feed

Pin14 – Joystick Y

Pin15 – Poti Speed